

Installing the Batteries

Wireless Keyboard use two AA alkaline batteries, Wireless mouse use one AAA Ni-MH rechargeable battery.

Installing Batteries in the Mouse

Step 1. Open the battery compartment

Step 2. Insert the batteries as shown inside the battery compartment.

Step 3. Replace the cover.

 


Install the batteries in the keyboard

Step 1. Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.

Step 2. Insert the batteries as shown inside the battery compartment.

Step 3. Replace the cover.

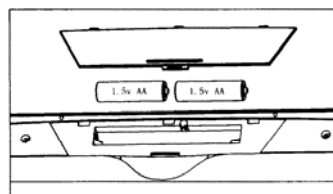


Connecting the Receiver

USB version

The receiver is connected to your computer via a 1.5 meter USB cable, and it plug to USB port of your computer.



 USB Port

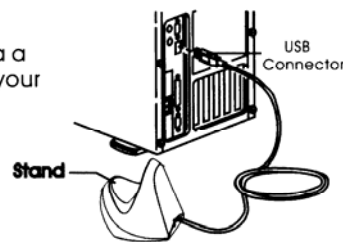

Stand

USB port installation

1. Connect the USB plug to USB port of your computer.

 
CAUTION:

Windows 98se or higher is required for USB port installation. Connect the receiver cable to the USB port on computer. For Windows, you may be prompted to insert the Windows software CD. Insert this software CD into the computer's CD-ROM driver when asked to do so. Then follow the on-screen instructions.

Indicators on Receiver

There is two indicator on the Receiver.

1. Connect: the Indicator will flash when you press the connect button. When the receiver successful change the Ids, the indicator will flash several fast.

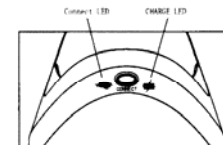


2. Charging: the indicator will light on when charging the battery in mouse, the indicator will turn off when the battery is full.

Changing the channel and security ID

Your mouse and keyboard come with 1 Channel and multi security ID. Which can let your receiver listen to one mouse and one keyboard. Do following step to change channel and security ID when you get undesired interference from another device used nearby..

 1. Press the connect button on the bottom of the keyboard.
2. Press the connect button on front of the receiver.
3. Press the connect button on the bottom of the mouse.

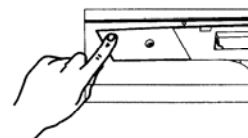

NOTE:

1. The Indicating LED will **light steadily** when the synchronization linkage is completed.
2. You need to do above steps to re-connect the mouse and keyboard each time you replace battery.
3. Your Keyboard and mouse may have only one channel due to different product version.

Charge the Battery in Mouse

Your mouse uses one AAA size Ni-MH rechargeable battery. Before you use the mouse, you need to place the mouse on the stand to charge the batteries for 15 hours. This is very important to battery life. Please make sure the charge indicator is light ON when you charge the mouse.

When you feel your wireless mouse is not working smoothly, that means that the batteries need to be recharged. Please put the mouse on the stand for charging. Normally it will take 12 hours to get the batteries fully charged.

USB charge Version

1. place the mouse on the stand and make sure the charging indicator is light ON.

CAUTION: Some computer will turn off the power of USB port when entering sleep mode. In this case, the battery inside the mouse can not be charged. So you are requested to keep your computer always ON When you charge the mouse

Hotkeys on the keyboard

The multimedia keyboard have 11 hotkeys and 1 3D scroll wheel.

Internet Hotkeys

 


Internet hotkeys are programmable

Multimedia Hotkeys



Scroll Wheel



Software Installation

The driver supports Win 98SE, Win 2000 and Win XP.

The driver will install automatically if the auto-run is enable in your computer, otherwise, you can manually launch the installation by double clicking the file setup.exe in the CD-ROM.

The setup applet s icon of the keyboard and the mouse will appear on the windows taskbar after successfully completing software installation.



Mouse setup applet Keyboard setup applet

You can double click or right click the applet, and setup the functions of your preferred selection for both keyboard and mouse to enhance your device

Scroll, Caps, Num Lock status

The scroll, Caps, Num lock status are shown on the taskbar (Win 2K and Win xp) or above the taskbar (win 98, win ME)

